

BW6021 CONVERTIBLE LIGHT INSTALLATION INSTRUCTION

CAUTION

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supplies conductors.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

Mounting/Hanging Parts

Convertible parts for Flush mount or wall lamp: 1/8"x 50mm nipple 1PC, Metal bushing 16mm 1PC, 8# x 1"box screws 2PCS, Fixture mounting screws with ball knobs 2PCS, P3 wire connectors 3PCS, Tool for set screw 1PC

Convertible parts for Pendant: Canopy with Metal gripper 1PC, 7" ground wire 1PC, Round mounting strap with ground screw 1PC, Fixture mounting screws with ball knobs 2PCS,

ASSEMBLY AND INSTALLATION FOR PENDENT

1. Secure the mounting bar(9) with box screws(6) to the outlet box(1).
2. Pull out the outlet wire and ground wire from the outlet box. Make wire connections with Wire Connector(2)
 - Black wire from light to Black wire (3) from power source.
 - White wire from light to White wire(4) from power source.
 - Loop the ground wire(5) to mounting bar(9) with a ground screw(6).
3. Attach the canopy(11) against the outlet box(1),secure with the ball nut(12) onto the mounting screw(7).
4. Loosen the ball nut(13), insert the bulb (15) into socket(14). After that, put the bulb into the shade(16). Finally, screw up the ball nut.

DO NOT USE BARE HANDS TO TOUCH THE BULB.

INSTALLATION IS NOW COMPLETE

REMINDER


If you have not decided whether for pendent or flush mount or wall lamp, we suggest you to try for pendent first. In case that the wire is not long enough when you convert the item for pendent after cutting the wire for wall lamp or flush mount.

ASSEMBLY AND INSTALLATION FOR FLUSH MOUNT OR WALL LAMP


1. Secure the mounting bar (9) with box screws(6) to the outlet box(1).
2. Pull out the outlet wire and ground wire from the outlet box. Make wire connections with Wire Connector (2)
 - Black wire from light to Black wire (3) from power source.
 - White wire from light to White wire (4) from power source.
 - Loop the ground wire (5) to mounting bar (9) with a ground screw (6).
3. Attach the canopy (11) against the outlet box (1), secure with the ball nut (12) onto the mounting screw(7).
4. Loosen the ball nut (13), insert the bulb (15) into socket (14). After that, put the bulb into the shade (16). Finally, screw up the ball nut.

DO NOT USE BARE HANDS TO TOUCH THE BULB.

INSTALLATION IS NOW COMPLETE

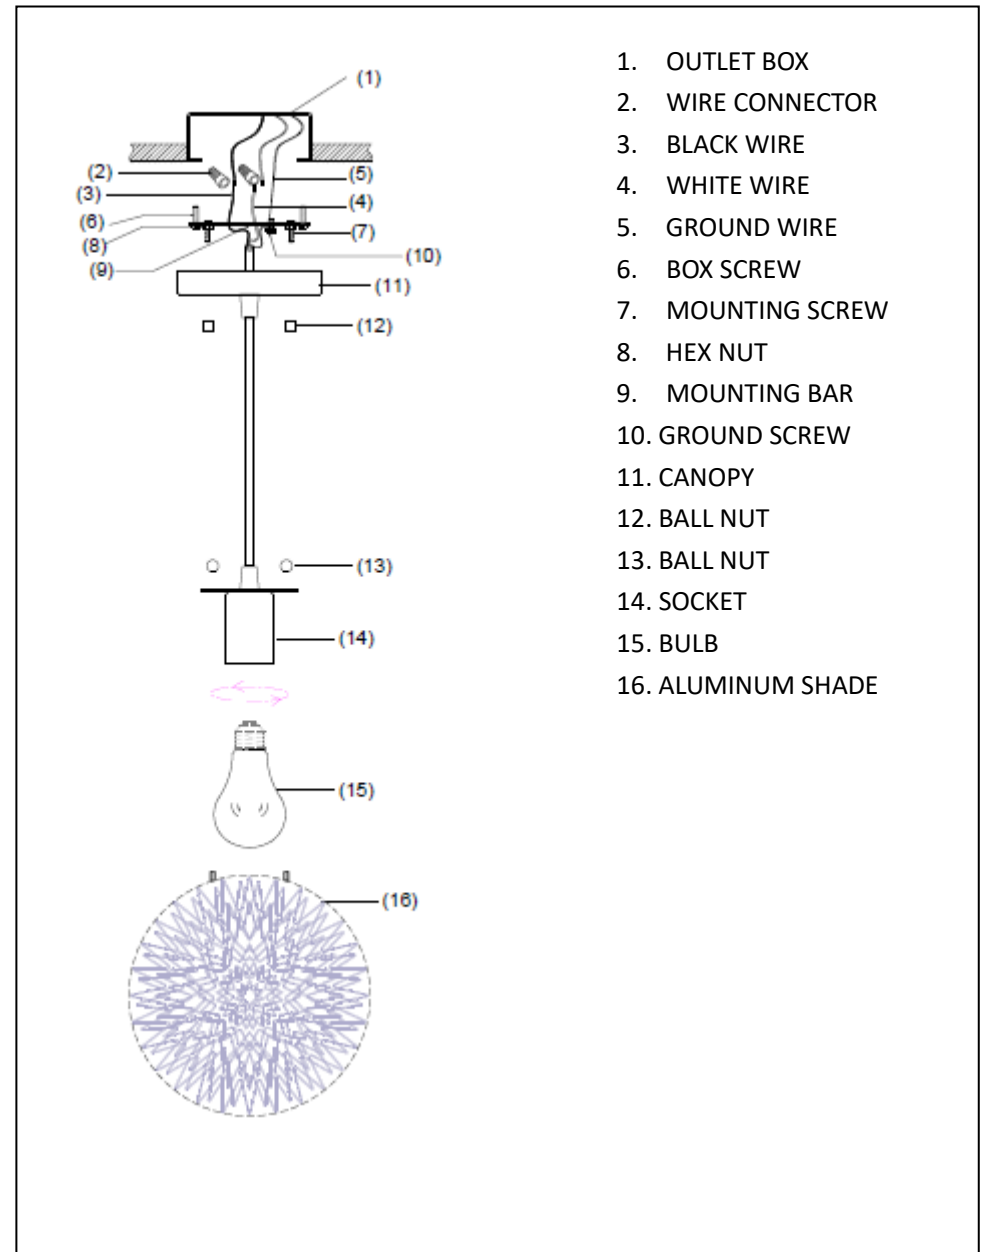

1. OUTLET BOX
2. WIRE CONNECTOR
3. BLACK WIRE
4. WHITE WIRE
5. GROUND WIRE
6. BOX SCREW
7. MOUNTING SCREW
8. HEX NUT
9. MOUNTING BAR
10. GROUND SCREW
11. CANOPY
12. BALL NUT
13. BALL NUT
14. SOCKET
15. BULB
16. ALUMINUM SHADE

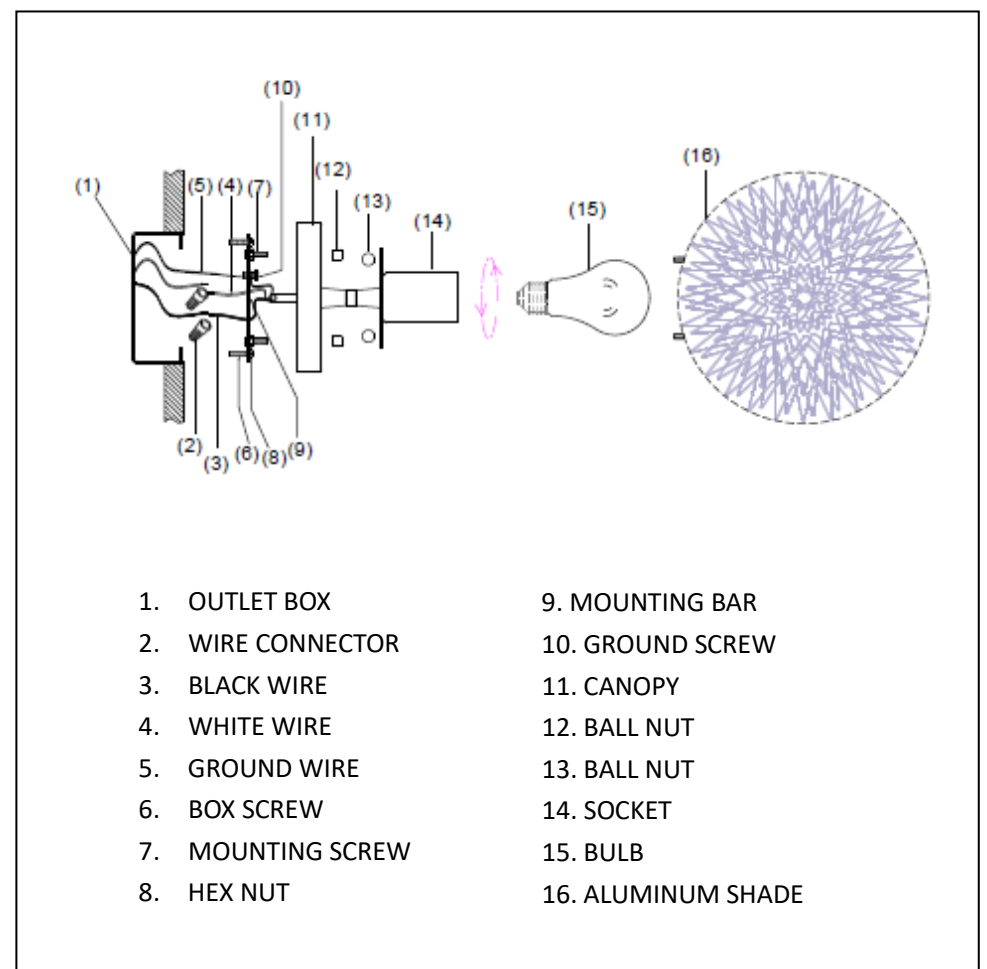

1. OUTLET BOX
2. WIRE CONNECTOR
3. BLACK WIRE
4. WHITE WIRE
5. GROUND WIRE
6. BOX SCREW
7. MOUNTING SCREW
8. HEX NUT
9. MOUNTING BAR
10. GROUND SCREW
11. CANOPY
12. BALL NUT
13. BALL NUT
14. SOCKET
15. BULB
16. ALUMINUM SHADE